

Plug-in Heater with Remote Control

Model: MH-11R 120V~ 60Hz 750W

SKU# 96429

Hammacher
Schlemmer

READ AND SAVE THESE INSTRUCTIONS

OWNER'S MANUAL

IMPORTANT SAFEGUARDS

NOTE: When switching on the appliance for the first time, allow it to run at full power for approximately two hours to remove any manufacturing odors. Make sure the room in which the appliance is located is well ventilated during this operation. It is normal for the appliance to emit small cracking sounds when turned on for the first time. Do not be alarmed.

IMPORTANT INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce risk of fire, electrical shock and injury to persons or property, including the following:

1. Read all instructions before using heater.
2. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Be extremely cautious when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes and curtains at least 3' (0.9 m) from the front and top of the heater and keep them away from the sides.
3. Extreme caution is necessary when any heater is used by or near children, and whenever the heater is left operating and unattended.
4. Always unplug heater when not in use.
5. Do not operate heater with a damaged plug, or if the heater has been dropped or damaged in any manner. Discard heater or return to an authorized service facility for examination and/or repair.
6. Do not use outdoors.
7. This heater is not intended for use in bathrooms, laundry areas, and similar indoor locations. Never place heater where it may fall into a bathtub or other water container.
8. Do not cover heater with throw rugs, runners, or similar coverings.
9. To disconnect the heater, turn control to OFF, then remove the plug from the outlet.
10. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock, fire or damage to the heater.

11. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
12. A heater has hot and arcing or sparking parts inside. Do not use in areas where gasoline, paint, or flammable liquids are used or stored.
13. Use heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, injury to persons, or other damage to property.
14. Ensure heater is plugged into a socket on a vertical wall when use, keep at least 8" of unobstructed space to the bottom air inlet of the heater to allow for ventilation to avoid a risk of danger.
15. To prevent overload and blown fuses, be sure that no other appliance is plugged into the same outlet or into another outlet wired into the same circuit.
16. It is normal for the heater's plug to feel warm to the touch. A plug which becomes hot to the touch or becomes distorted in shape may be a result of a worn electrical outlet. Worn outlets or receptacles should be replaced prior to further use of the heater. Plugging heater into a worn outlet/receptacle may result in overheating or fire.
17. Always plug heaters directly into a wall outlet. Never use with an extension cord or relocatable power tap (outlet/power strip).
18. Check the heater plug connections. A loose fitting outlet can cause the plug to overheat or cause a fire. Be sure plug fits tight in the outlet. Check frequently during use to make sure plug and outlet are not hot. If so, discontinue using heater and have outlet replaced by a qualified electrician.
19. Note: Heaters draw more current than small appliances, overheating of the outlet may occur even if it has not occurred with the other appliances.
20. Do not use cord extension sets, multiple socket outlets or adaptors to avoid a risk of danger. Plug only into a wall socket outlet.
21. Make sure no pieces of polystyrene or other packaging material have been left between elements of the appliance. It may be necessary to clean the appliance.
22. Never leave heater on while sleeping.

**DANGER-HIGH TEMPERATURES MAY BE GENERATED
UNDER CERTAIN ABNORMAL CONDITION. DO NOT
PARTIALLY OR FULLY COVER OR OBSTRUCT THE
FRONT OF THIS HEATER.**

**FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS**

GROUNDING INSTRUCTIONS

This appliance is for household use only and may be plugged into any 120-volt AC electrical outlet (ordinary household current).

DO NOT use any other type of outlet.

WARNING: This unit is suitable for grounded receptacle use only.

This unit has a grounded plug as shown in Figure 1. An adapter, as shown in Figure 2, is available for connecting three-blade grounding-type plugs to two-slot receptacles. The green grounding lug extending from the adapter must be connected to a permanent ground such as a property grounded outlet box. The adapter should not be used if a three-slot grounded receptacle is available.

NOTE: The adapters ARE NOT supplied with this heater. Read, follow, and save the instructions that are included with the adapter you choose.

GROUNDING PLUG SAFETY TIPS

1. NEVER pull or yank on the plug or the appliance.
2. To insert plug, grasp the heater firmly and guide it into the outlet.
3. To disconnect the appliance, grasp the heater and remove it from the outlet.
4. Before each use, inspect the grounding plug for cuts and/or abrasion marks. If any are found, the appliance should be serviced. Please return it to our Service Department or to an authorized service representative.
5. DO NOT operate appliance if the grounding plug shows any damage, if the appliance works intermittently or stops working entirely.

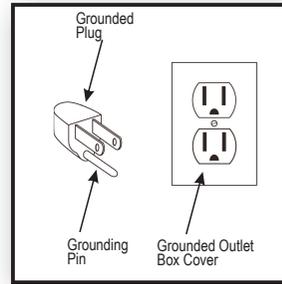


Figure 1


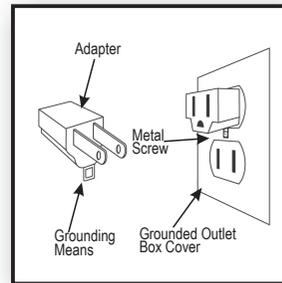


Figure 2

PARTS OF THE HEATER

Parts of the Heater	Symbols
1. Control Panel	⏻ Power Button
2. LED Display	⊕ Plus Button
3. Safety Grille	⊖ Minus Button
4. On/Off Switch	⏻ Timer Button
5. Remote Control	

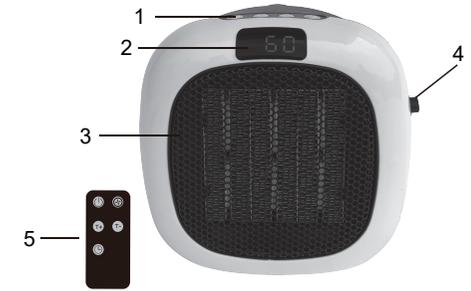

OPERATING INSTRUCTIONS

Operation

1. Check there is no damage to the plug-in heater.
2. Plug the plug-in heater into a 120 volts AC outlet. **Be sure the plug fits tightly into outlet.** When plugs fit loosely into receptacles, they may slip partially or completely out of the receptable with only the slight movement of the unit. Receptables in this condition may overheat and pose a serious fire hazard; if covered by a curtain or drape, the fire hazard is even greater.
3. To give power to the plug-in heater, press the on/off switch to the 'on' position, the **LED display** will turn on indicating power to the unit. The **LED display** will remain lit until the on/off switch is pressed again to the 'off' position.
4. Turn the heater ON by pressing the **Power Button** ⏻.
5. To turn the heater OFF, press the **Power Button** ⏻ again. The unit will first turn off the heating elements, the fan will shut down 60 seconds later. Press the on/off switch, on the side, to completely power off the unit. Unplug the unit by pulling the plug from the electrical outlet only after the fan has stopped and the unit has cooled down

Timer Function

The timer function may be activated when the heater display is in any function. This function allows you to set the length of time, from 0 hour to 12 hours, the heater will run before turning itself off. Pressing the **Timer Button** ⏻ will increase the length of time by 1 hour each time the button is pressed. After the display reflects 12 hours, pressing the **Timer Button** ⏻ once more will reset the heater to run continuously. The heater will turn off when the set time has elapsed. The unit can be turned back on by pressing the **Power Button** ⏻. Pressing the **Timer Button** ⏻ to 0 hour will cancel the timer function.

Automatic Temperature Control

1. To set the room at a specific temperature, press the ⊕ and ⊖ buttons.

NOTE: The temperature display does not indicate the temperature of the heated air being emitted by the heater. The heater can only indicate the temperature you have set at point 1 above and may not reflect the actual room temperature.

2. Once the room temperature reaches 2 degrees above the set temperature, the heater will shut off. Once the room temperature reaches 2 degrees below the set temperature, the heater will turn back on and continue to cycle off and on to maintain the set temperature.

NOTE: It is normal for the heater "fan" to run for approximately 60 seconds when the heater shuts off after reaching the set temperature.

You also can press the ⊕ or ⊖ buttons on the remote control to set the room at desired temperature.

Rotating the Plug

WARNING: Only attempt to rotate the plug when the plug-in heater is cool and unplugged.

1. Press and hold the plug rotation button on the back of the plug-in heater.
2. Rotate the plug 180° whilst holding the plug rotation button.

Remote Control

1. The remote control uses one (1) "CR2025" button cell (included) for operation.
2. All functions performed by using the remote control work identically on the unit. To change the heat setting from high (HH) to low (LL) without the remote control ⊕ button, press the ⊕ and the ⊖ buttons on the unit at the same time. To change the heat setting back to high heat (HH), repeat the same function.
3. Replace the battery if the remote control does not operate well.


NOTE: Remove the battery out of the remote control if you won't use the remote control for a long time.

To install or replace the button cell, simply press the holder at the bottom of the handheld remote control unit with your thumb to pull out the battery cover. Replace with a new "CR2025" button cell, and then replace the cover.

Battery Disposal - Please dispose of the used battery per municipal or provincial law.

WARNING

- 1) Keep batteries out of reach of children. Should a child swallow a battery, consult a doctor immediately.
- 2) Do not recharge or dispose in fire.
- 3) Keep in a dry and cool place.
- 4) Insert battery in correct direction.

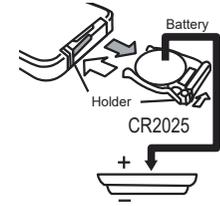

THERMAL CUT-OFF PROTECTION SYSTEM

This heater includes an Overheat Protection System that shuts the unit off permanently when a potential overheat temperature is reached. If this occurs, the heater can only resume its normal operation after resetting it.

To reset the heater:

1. Press the **Power Button** ⏻ to turn the heater OFF and press the on/off switch to the "off" position.
2. Unplug the heater and wait 10 minutes for the unit to cool down.
3. After the 10 minutes, plug the unit in again and operate normally.

CLEANING AND MAINTENANCE

1. Press the **Power Button** ⏻ to turn the heater OFF and press the on/off switch on the side to the 'off' position. Allow the unit to cool down and unplug the heater before moving or cleaning.
2. Interior dust can often be removed by using a vacuum cleaner with a crevice tool attachment.
3. To clean the enclosure, use a clean, soft and lightly damp cloth to gently wipe off dirt from the surface of the unit. Be sure not to wet the heating element and switches. Allow the unit to dry completely before use.
4. Do not use cleaning liquid or other chemicals to spray on the unit.

WARNING: Any other servicing should be performed by an authorized service representative.

STORAGE

1. Perform the cleaning procedures as described above.
2. Wipe all parts dry.
3. Pack heater in a plastic bag and store in a cool, dry place. We recommend storing the heater in its original carton.

TROUBLE SHOOTING

If your heater fails to operate:

1. Make sure the electrical outlet or circuit breaker is working.
2. Check for obstructions. If you find an obstruction, turn the heater OFF, and UNPLUG THE UNIT. Carefully remove the obstruction and follow the reset instructions.
3. Unplug, let heater cool down and reinstall.

SERVICING

For servicing, other than general user maintenance, please contact Customer Service at 1-888-880-3267,

We are open 24 hours a day, 7 days a week.