

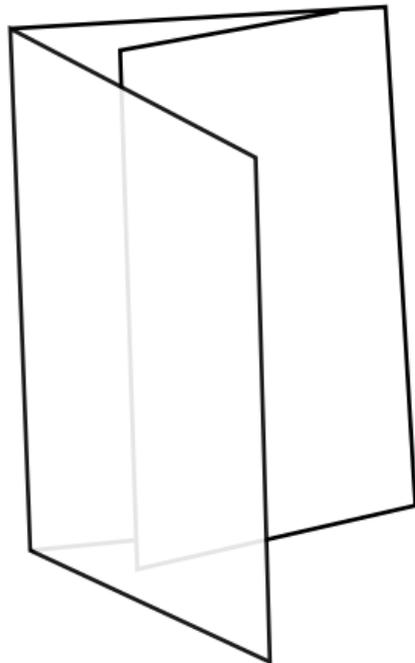


90008 说明书成品尺寸：210x95mm 荷包折

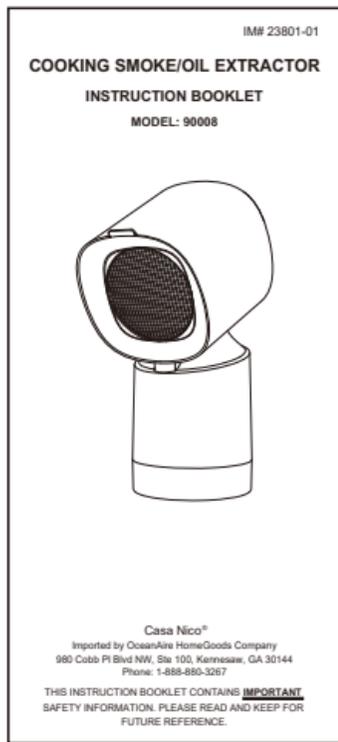

Guideline for using this product with other small appliances


- ❖ When this product is used with other small appliances, it should be placed on the same table, with the air inlet as close as possible to the cooking surface of other small appliances (i.e. induction hob) to improve the efficiency of smoke extraction. Do not use with an open flame stove.
- ❖ This product should be positioned no more than 4" from the cooking surface (or more) of other appliances, with the air inlet facing the cooking surface (as shown in the picture on the right).
- ❖ Do not blow the fume exhaust outlet of this product directly onto oneself.
- ❖ Do not move or push down on the machine during operation.
- ❖ Do not allow children to operate this product. This product should be used with adult supervision.
- ❖ When using this product, ensure it is out of reach from children.
- ❖ There should not be any objects blocking the air inlet/outlet.

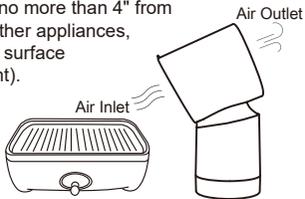


Cleaning and Maintenance

Please follow the procedure below to replace the carbon filter and clean the oil collection reservoir cup after each use.


1. Pull out the air inlet cover.
2. Gently pull the holders on both sides and push up to remove the filter holder on the back of the cover.

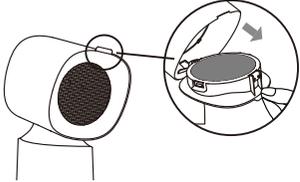


3. Take out the carbon filter and aluminum filter.

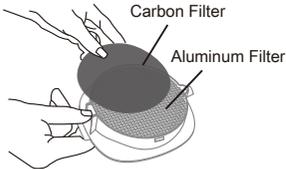

4. Rinse the aluminum and carbon filters with warm water, allow them to air dry then install them back to the machine.

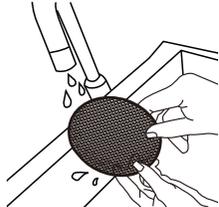


5. Put the carbon and aluminum filter back into place.

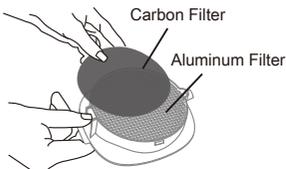



6. Align the holders to the bulges on the sides of the cover, and press the filter into place. Once you hear a clicking sound, the filter is assembled properly.



7. Attach the air inlet cover to the main unit.

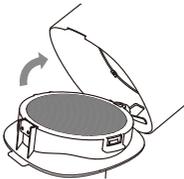

8. Complete the assembly.

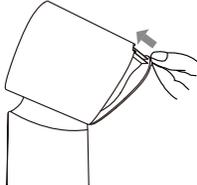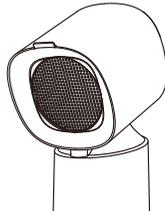

- ① The carbon filter should be changed every 2 to 4 months depending on use.
- ② When cleaning, maintaining or moving the product, you must first turn off the product and then disconnect the power adapter.
- ③ Do not clean until the motor has completely stopped running to avoid injury.
- ④ Do not immerse the power adapter or main unit in water to clean or flush under the faucet, and do not expose the inside of the fan to water.
- ⑤ Do not use wire brushes, oil or any corrosive fluids to clean this product to avoid damage.
- ⑥ Use a slightly damp cloth to clean the surface.
- ⑦ After cleaning, and when the unit and filters are completely dry, connect the product to power adapter.
- ⑧ If the product is not used for a long time, please store it in a dry, cool and safe place.

TECHNICAL SUPPORT


If you need any assistance with setup, operation, or parts for this product, please call us. Our technical support staff is ready to help! We are open 24 hours a day, 7 days a week.

1-888-880-3267 (FANS)

You may also reach us online at [OceanAireHomeGoodsCompany.com](http://OceanAireHomeGoodsCompany.com)

COOKING SMOKE/OIL EXTRACTOR INSTRUCTION BOOKLET

MODEL: 90008

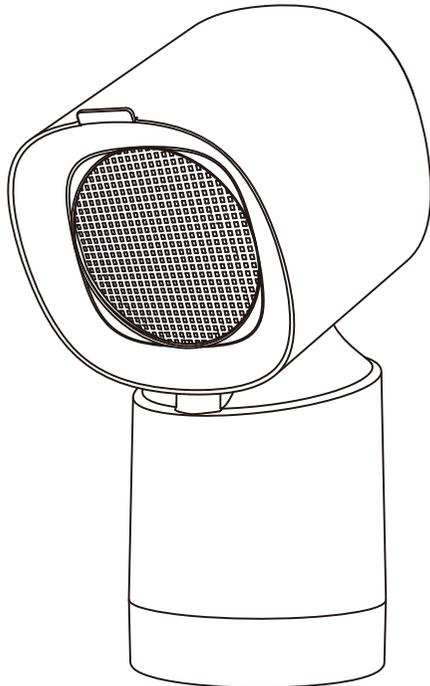

Imported by OceanAire HomeGoods Company Casa Nico  
980 Cobb PI Blvd NW, Ste 100 Kennesaw, GA 30144  
Made in China

Casa Nico®  
Imported by OceanAire HomeGoods Company  
980 Cobb PI Blvd NW, Ste 100, Kennesaw, GA 30144  
Phone: 1-888-880-3267

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT**  
SAFETY INFORMATION. PLEASE READ AND KEEP FOR  
FUTURE REFERENCE.

## CAUTION

- ❖ This appliance is ideal for use in an island kitchen, living room, parlor, RVs, balcony, patios, etc. It is used for high speed extraction of fumes from electric grill, electric fondue pot, multi-purpose pot, electric cake pan, electric grill, etc. After the fumes are separated by the filters, the clean air is discharged into the room. This product is a small (Mini) type/mobile/recirculating cooker hood, featuring air extracting and purifying functions.
- ❖ The smoke/oil extractor should not be used with a ceramic stove top or gas stove.
- ❖ This product requires adequate ventilation of the room with the smoke/oil extractor is used with other appliances.
- ❖ There is a fire risk if cleaning is not carried out in accordance with the instructions.
- ❖ **FIRE HAZARD - RISK OF FIRE IF NOT CLEANED AS DESCRIBED IN THE INSTRUCTION MANUAL.**
- ❖ Accessible base may become hot when used with cooking appliances.

## Important Safety Measures

- ❖ When using the product for the first time, or after each use, it is important to clean the oil in the oil collecting cup and the filters (carbon filter and aluminum filter) promptly.
- ❖ **READ CAREFULLY BEFORE ATTEMPTING TO ASSEMBLE, INSTALL, OPERATE OR MAINTAIN THE PRODUCT DESCRIBED. PROTECT YOURSELF AND OTHERS BY OBSERVING ALL SAFETY INFORMATION. FAILURE TO COMPLY WITH INSTRUCTIONS COULD RESULT IN PERSONAL INJURY AND/OR PROPERTY DAMAGE!**

## Safety Precautions

**READ AND SAVE THESE INSTRUCTIONS!** Read this entire manual before operating this product. When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury, including the following:

- ❖ To avoid electric shock and fire, please use the original power adapter provided and plug the power adapter into the appropriate power outlet, do not modify the plug itself in any way. If the power adapter is damaged, do NOT try to fix it yourself, please call a certified electrician to replace it.
- ❖ Do not bend, bind, drag, or press the power cord with a heavy object, do not place the cord near a high temperature or fire source, do not clip the cord into a crevice, or change the cord yourself.
- ❖ Do not unplug the power adapter directly with wet hands. Disconnect the power adapter when the unit is not in use for a long time to prevent the insulation from deteriorating and causing electric shock.
- ❖ Do not move the unit or disassemble or assemble parts during operation as this may cause personal injury or damage to the unit. Always disconnect the power adapter when cleaning and servicing or replacing the filters.
- ❖ Do not let the cord hang over the edge of a table, counter or come into contact with hot surfaces.
- ❖ Do not subject the product to severe impacts or drops.
- ❖ Do not put small objects such as cotton swabs, wire, toothpicks, paper crumbs into the air inlet and outlet. Place the product on a stable surface to avoid damage to the machine or its parts.
- ❖ **Use this cooking smoke/oil extractor only as described in this manual.** Improper usage may cause fire, electric shock or personal injury.


- ❖ To protect against electric shock, do not place this product on windowsills, immerse unit, plug or cord in water. Do not spray with liquid or use near water sources.
- ❖ This product is intended for residential use **ONLY. DO NOT** use outdoors.
- ❖ **WARNING:** To reduce the risk of fire or electric shock, do not use this product with any solid-state speed control device.
- ❖ Close supervision is necessary when any appliance is used by or near children.
- ❖ Turn the unit OFF and unplug from the outlet when not in use, before moving and before cleaning.
- ❖ To unplug the unit, first turn the unit OFF, grip the plug and pull from outlet. Never pull or tug by the cord to remove from the outlet.
- ❖ **DO NOT** operate this product with a damaged cord or plug. Discard this product or return to an authorized service facility for examination and/or repair.
- ❖ **DO NOT** operate the unit if the housing is damaged.
- ❖ **Always** use the unit on a dry leveled surface.
- ❖ **DO NOT** operate the unit in the presence of explosive and/or flammable fumes.
- ❖ **DO NOT** place or operate the unit near open flame (stove fireplace, etc.).
- ❖ The use of unauthorized attachments is not recommended. This may cause fire, electrical shock, or injury.
- ❖ **Do not** operate this unit without fan guards properly locked.
- ❖ **Do not** hang or mount product on a wall or ceiling.
- ❖ A loose fit between the AC outlet and power adapter may cause overheating and distortion of the power adapter. If it occurs, contact a qualified electrician to replace worn outlet.
- ❖ Do not use this appliance if the power supply is damaged.
- ❖ The plastic feet on this product may interact with wood and cause damage to furniture. **DO NOT** place on fine wood furniture.

## Product Description



## Operation

- ❖ Unravel and straighten the cord of the power adapter before use.
- ❖ Insert the output plug of the power adapter to the power connector under the power button on the main unit. Then plug the power adapter (DC 24V) into a wall outlet.

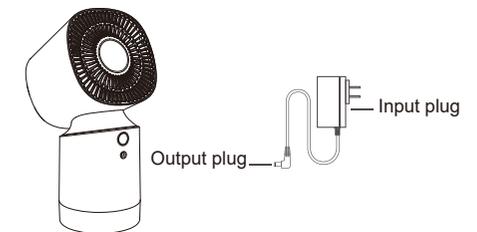

- ❖ To turn the unit on, press the power button on the back of the main unit;
- ❖ Mode of operation: Press the power button for 2 seconds to start the unit and run at speed level 1 (blue light), press it once again to switch to level 2 (green light); press the power button 2 seconds again to turn it off.

